


VW T5 Multivan/Transporter/Caravelle

Rear Bumper 60 below/Heckstoßstange 60 unten



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

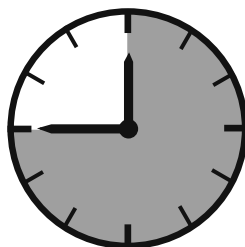

45 Minuten

Artikel-Nr:

151 4138 Stainless Steel
151 5138 Steel
151 9138 Mounting Set

Revision 2: 3.11.2009





VW T5 Multivan/Transporter/Caravelle

Rear Bumper 60 below/Heckstoßstange 60 unten

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

SW: 10 mm
SW: 13 mm
SW: 17 mm

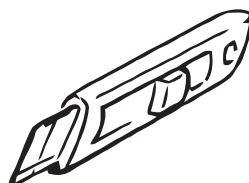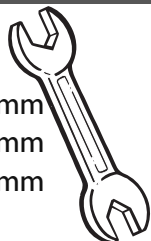


M6: 10 Nm
M8: 25 Nm
M10: 50 Nm



Parts list/Teileliste/Lista de accesorios

1 151 4138.1 / 151 5138.1

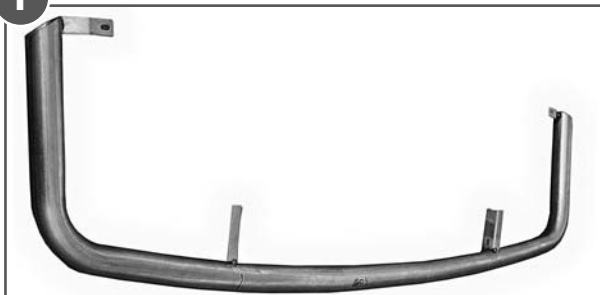

Mounting set 151 9138/Montagesatz 151 9138



2 151 5332 L



3 151 5331 R











Standard Parts list/Normteileliste








a		M6x25; DIN 933	2x
b		M8x30; DIN 933	7x
c		M10x30; DIN 933	1x
d		M8; DIN 934	4x
e		Ø 6; DIN 127	2x
f		Ø 8; DIN 127	7x
g		Ø 10; DIN 127	1x
h		Ø 6,4; DIN 9021	2x
i		Ø 8,4; DIN 9021	11x
k		Ø 10,5; DIN 9021	3x
m		M6; GetoWell	2x

Artikel-Nr:

151 4138 Stainless Steel
 151 5138 Steel
 151 9138 Mounting Set

Revision 2: 3.11.2009

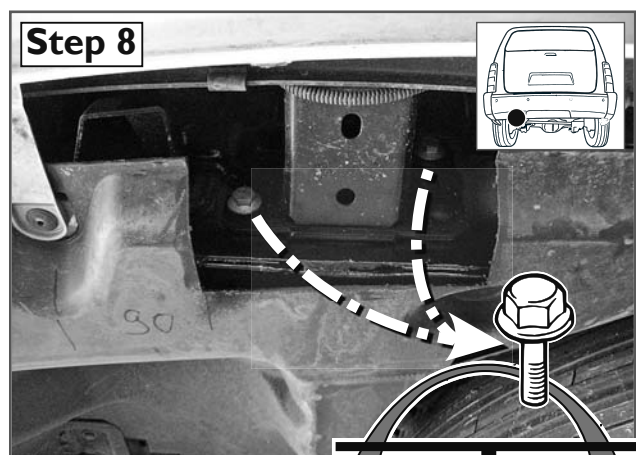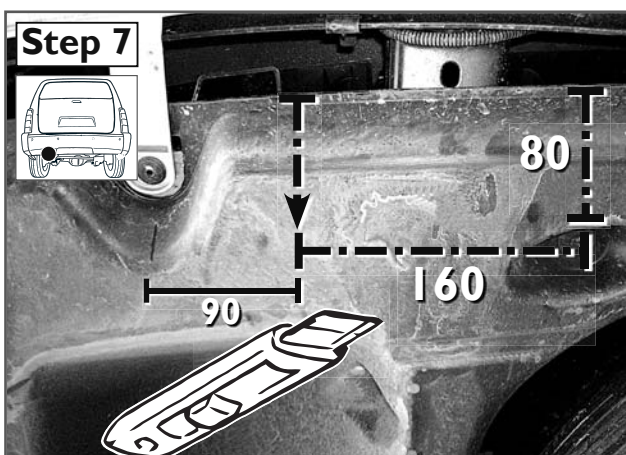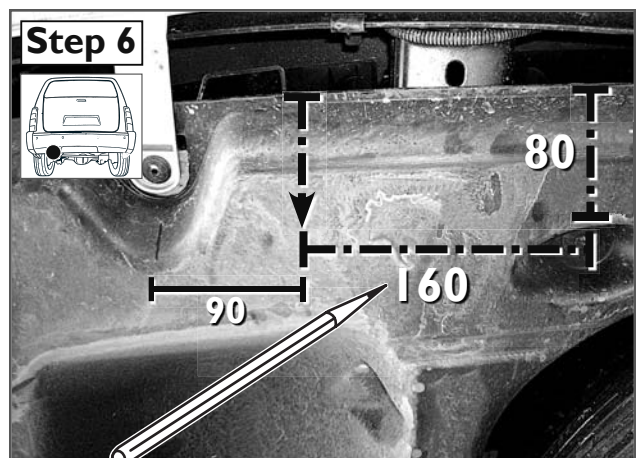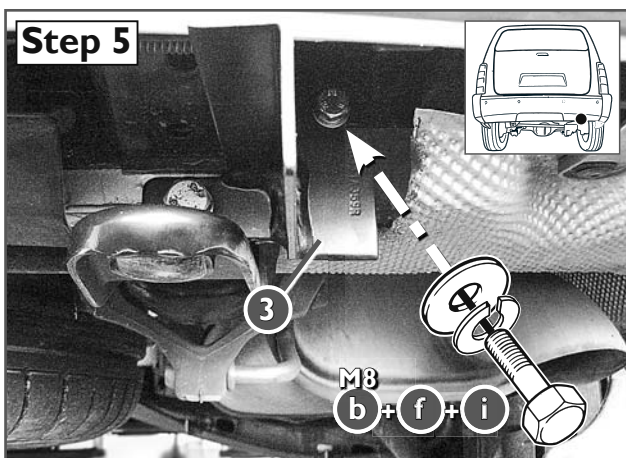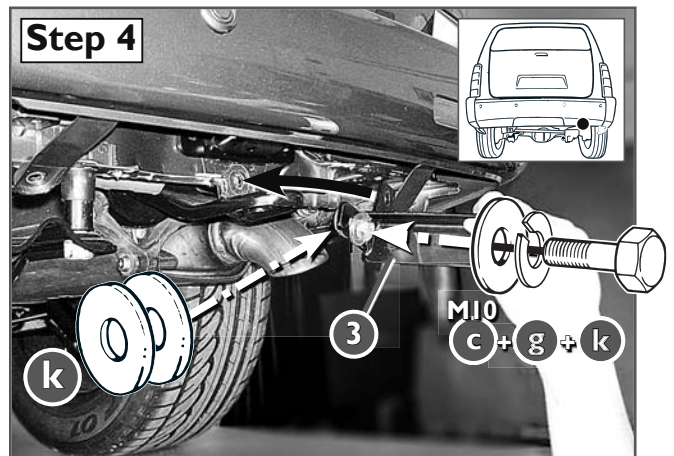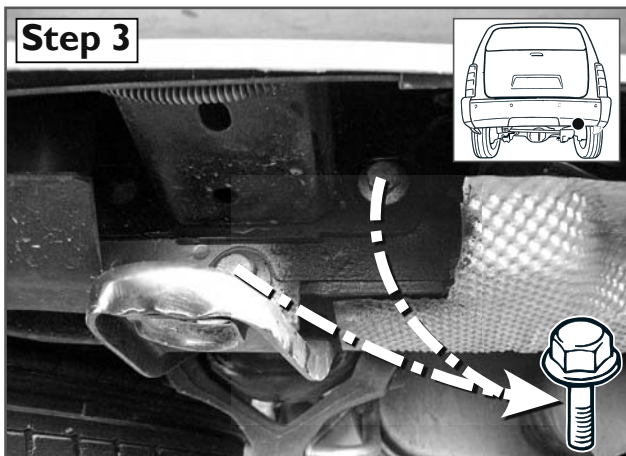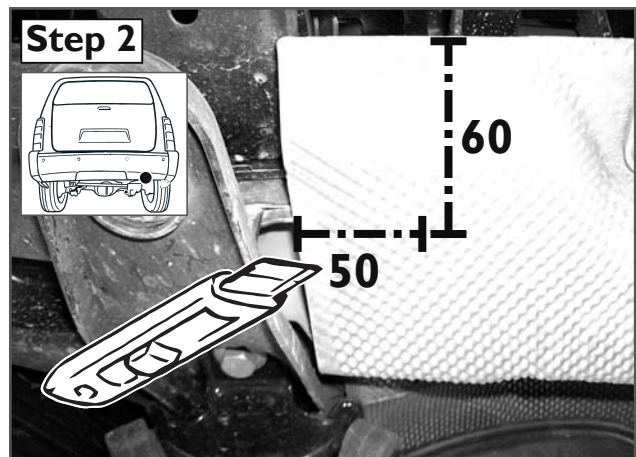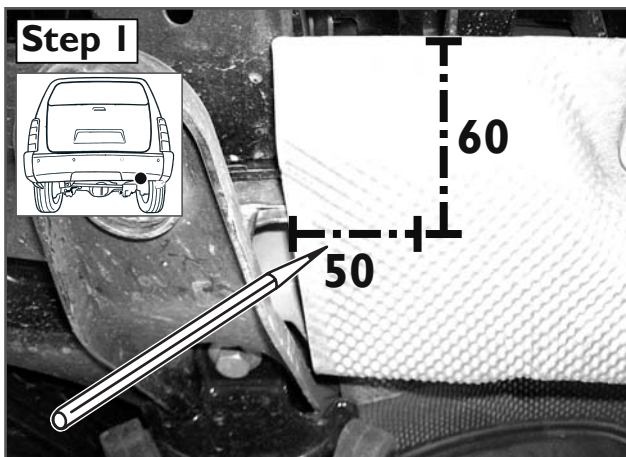

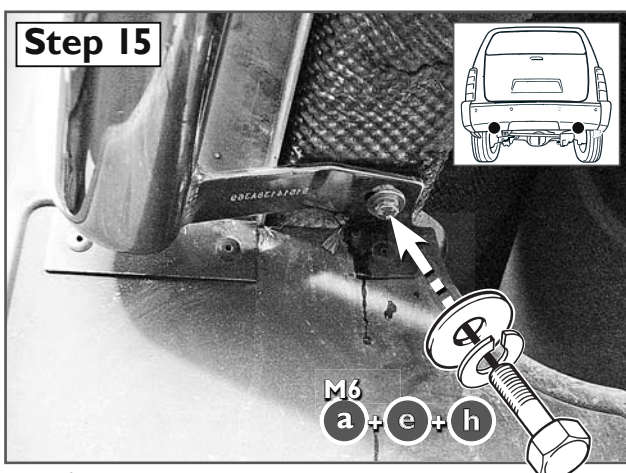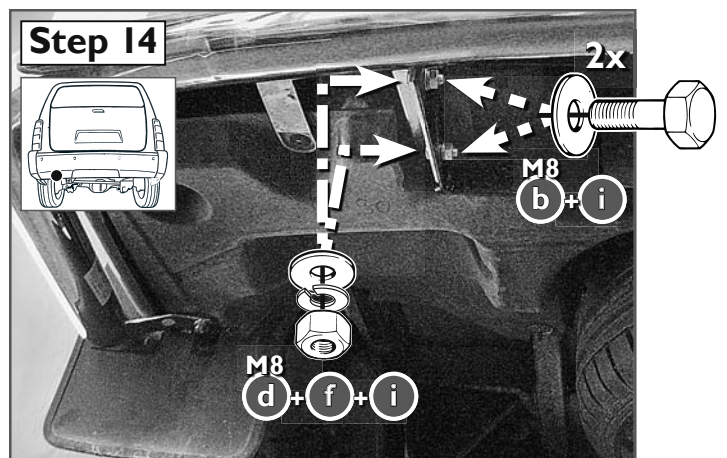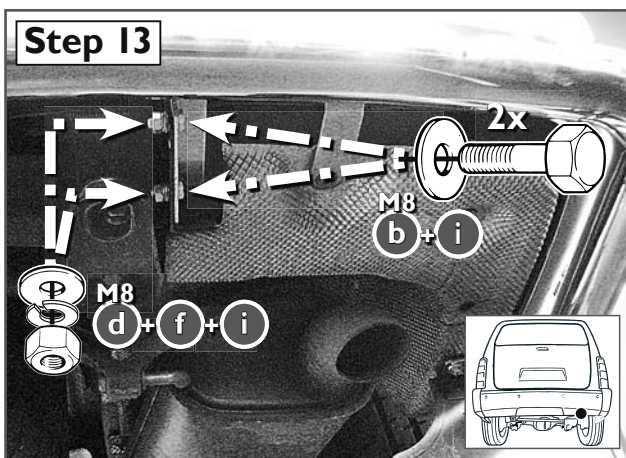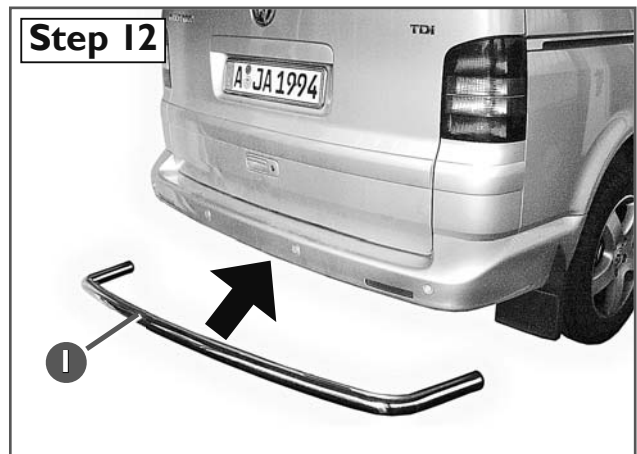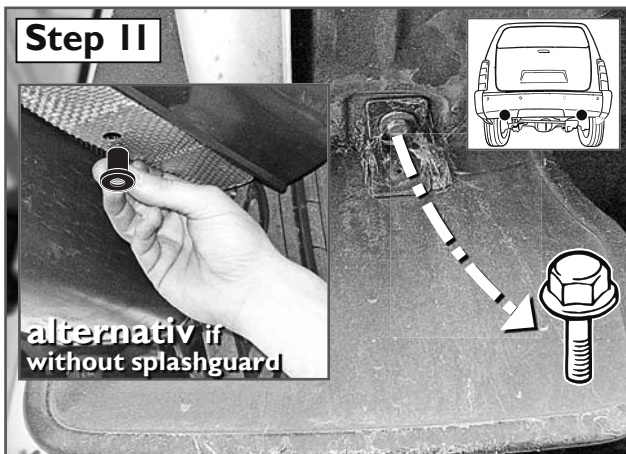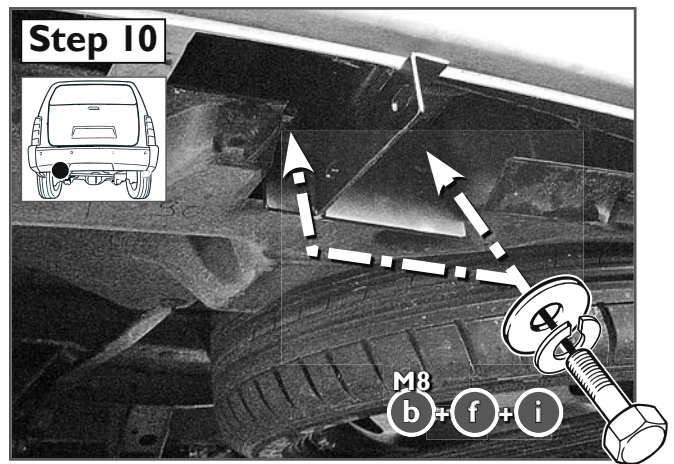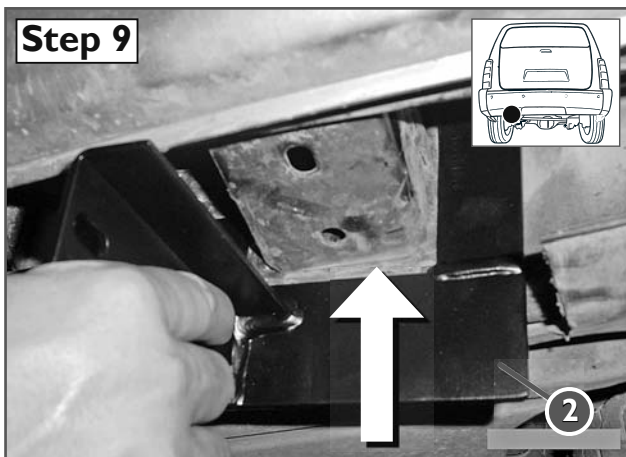

Artikel-Nr:
151 4138 Stainless Steel

Revision 2: 3.11.2009